

EZ HEAD Set Up Instructions:

Page One: Check List



Frame



Power Supply



Joystick Controller



Extension Cable



**Head Mounting
Hardware**



**Camera Mounting
Hardware**



1: Thread the shaft portion of the mounting hardware to the base plate of the frame.



2. Set the frame to the tripod or Jib.



3. Secure the mount with the knob and washer.



4: Make sure that both the pan and tilt motors are dis-engaged.



5. Place the camera or camera plate on to the camera platform portion of the frame.



6. Balance the camera horizontally by sliding the camera front to back as shown above.



7. After the vertical balance is good. Tighten the camera to the platform.



8: Loosen both the camera cradle knobs.



9: Balance the camera vertically by raising and lowering the camera as shown above.



10: A perfect balance should allow you to position the camera at any angle and stay in place when released. Do this with both motors dis-engaged. Continue to adjust the vertical and horizontal balance until perfect.



11: Once the vertical balance is good, point the camera downward then tighten the camera cradle knobs.

12: Connect the ends of the extension cable to the motors of the head. The shorter cable goes to the pan motor and the longer cable goes to the tilt.

Dress the extension cable on to the jib and connect it to the joystick box. Connect the power adapter to joystick box and plug it in.

IMPORTANT NOTE: Do not touch the joystick for a full 4 seconds after turning on the joystick box power switch.

The internal programming needs this time to calibrate the center point for the joystick. If the motors drift on their own, power down and restart the box as noted.

NOTE: The joystick direction controls can be customized to suit the preferences of the individual operator. Simply switch the pan or tilt direction switch to accommodate.



13: Engage both the tilt and pan motors and tighten the motor knobs.

NOTE: Be sure to disable the image stabilization feature of your camera as it may cause the image to jump at the end of the pan/tilt movement.

TURNTABLE MODE

Unique Dual Purpose Design



Remove 2 screws and the head frame detaches from the pan base.



Attach your own turntable platform.




Paint or cover and you have a revolving platform for product shots.

The versatile EZ Head can convert into turntable mode with the flip of a switch, giving you alternative uses for your investment.

The illustration above shows how to attach your own turntable base to the pan base of the head.

Simply use the switch on the side of the joystick box to change controls from the joystick to the speed control knob.

Use the knob to control the direction and speed of the turntable base.

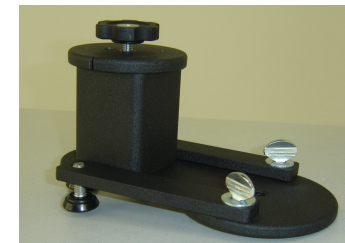

For convenience and more versatility, a folding table top stand is available for mounting the pan base. This eliminates the need for a tripod and gives you more options for placement.
TABLE TOP STAND: \$99